

## **Pass Through Message Format**

2/19/2004 7:10 PM

### **RadNet Pass Through Message Thursday, February 19, 2004**



# Pass Through Message Format

2/19/2004 7:10 PM

## Pass Through Header

The Pass Through Message (PTM) allows the instrument manufacturer to send/talk to an instrument on the network using RadNet. RadNet only defines the structure of the first 5 bytes within the PTM packet of data. The instrument manufacturer is responsible for defining the remaining bytes and their structure. Manufacturers may use this message to get/pass instrument settings, run diagnostic routines, or perform calibration routines.

Software provided by the manufacturer sends a PTM to the instrument. The instrument then checks to see if the message belongs to its manufacturer (in this example 99) and then checks to see if the instrument code is the same. Once it completes these checks, it parses the message based on the manufacturer's specifications. The monitoring computer only handles RadNet message code values (byte 3) of zero, allowing the monitoring computers to filter out and thus ignore the Pass Through Messages.

A manufacturer must have an Instrument type code so that broadcast messages can be used. For example: If an instrument manufacturer wants to make a global update to gamma area monitors, this update can be completed using the UDP broadcast message. However, if the network also has other instruments (such as Alpha CAMs) made by the same manufacturer, they will ignore this particular message and only gamma area monitors will process it.

The instrument may send acknowledgement to the sending computer by using a pass through message. Once the instrument has finished or accepted a request, it will send a PTM message to the requesting computer. Again, the instrument can broadcast this reply and only the sending computer would accept the packet of data and take the appropriate action.

Other methods for updating settings or viewing other instrument data include:

1. The instrument can provide a web-based interface. This interface would allow any browser to gain access to the instrument. The instrument manufacturer is responsible for providing the security and preventing unauthorized access to the instrument settings.
2. Software provided by the instrument manufacturer opens a TCP/IP (other than ports 16367 and 16368) port that is used to send commands to the instrument or request information. The instrument manufacturer is responsible for providing the security and preventing unauthorized access to the instrument settings.

### CAUTION:

If the monitoring computer and/or the instrument uses the same port (such as 16367) to send or receive data at a high push rate (instrument .1 second push rate), then data loss can occur. A .1 second normal push rate only allows for a very small window of opportunity to gain access to the instrument. Most instruments are simple 8 or 16 bit processor-based, incapable of spawning threads to handle multiple requests from the network.

Subsequently the network will be impacted because of network error messages. The error message generated by the network will say "destination port unreachable". This error message is saying that the port is being used at the same time access is being requested. The logical course of action would *seem* to be to increase the push /requests rates. This approach, however, will only increase the network problem and could even bring the network down. Instead, it is appropriate to decrease the push/request rate. Increasing or using very high push rates is only appropriate when full knowledge of the network/instrument capacity is known and its affects are understood.

It is important to remember that the major limiting factor for RadNet is finite value of network bandwidth. Every message and every computer/instrument has an effect on the network and its available bandwidth. Therefore, every user, every computer and every instrument must utilize the network effectively. If RadNet has its own network infrastructure (Intranet), then there is also total control over the network and bandwidth usage. However, if RadNet is running on top or within existing infrastructure and/or connecting to the Internet, then network usage becomes important. As the network usage (bandwidth usage) increases, so does the number of collisions on the network that can lead to a network failure. If the RadNet normal/abnormal push rate is once every 5/1 minute(s), then there is plenty of open space (time) for a request to get through to the instrument.

# Pass Through Message Format

2/19/2004 7:10 PM

Just because data can be pushed at .1 second and the network can handle it, doesn't mean it should. The push rate of the data should be based upon the instrument having valid data, how smart the instrument is, and its affect on the network during an event. It is necessary to allow enough bandwidth so that all of the instrument(s) can push at the abnormal push rates with network bandwidth to spare (<= 50% of the network bandwidth). RadNet makes use of the fact that instruments have become smarter and can detect when and if they have a problem. This important fact should also be used to determine the push rate of an instrument. The RadNet system should be tuned (push rates adjusted) to make sure there is plenty of reserved network bandwidth for an event (all instruments go into abnormal push rates). This scenario should be tested before going into production.

One way to prevent the bandwidth problem is to use two UDP ports for the network interface. Instruments can use port 16367 to send data and 16368 to receive requests. The monitoring computer can use port 16367 to receive data and port 16368 to transmit commands or requests. This distribution allows the instruments to continue to push data at high rates and still be able to receive request at the same time.

Instrument manufacturers can support the two-port option by being able to set the send/receive port parameters. If both parameters are set to 16367, then the instrument can only use one UDP port send/receive data. However, if the send parameter is set to 16367 (send/push data port) and the receive port is set 16368 (listen port) the instrument then requires two parameters. For a more secure interface, the listen port should only allow a certain IP address to pass requests. The instrument should check the incoming request against it list of IP addresses. If the requesting IP address is not on this IP list, then the instrument can ignore the request. This technique is called IP filtering and is a common practice in the network world. To secure the instrument further, the listen option should also be selectable. Selectable means that the instrument will not allow anyone to gain access (request or send commands) to it and will only transmit data to the network. This option is valuable to any instrument that is not behind a secure firewall.

Field Name	Type	Position	Codes	Notes
Header Check Sum	Byte	1		The first byte (01, byte) is a check sum, to ensure the integrity of the header transmission. The check sum is the sum of bytes 2 through 55 The vendor is responsible for determining how this value is to be used.
RadNet Version Number	Byte	2	See <a href="#">RadNet Versions Page</a>	The second byte (02, byte) is the RadNet version number. This number is used to indicate the version of the RadNet message.  The receiving software is responsible for handling all received RadNet messages, although the most current version's functionality may not be provided.
Message Codes	Byte	3	See <a href="#">RadNet Message Codes Page</a>	Byte (03) is the message code. The message code tells what type of RadNet message has been sent (status, check source, etc.).  Value = 2
Instrument Manufacture Code	Word	4-5	See <a href="#">Pass Through Instrument Manufacture Code Page</a>	The instrument manufacturer or vendor is responsible for handling the rest of the message (after byte 5) format.

# Pass Through Message Format

2/19/2004 7:10 PM

## Example of Pass Through Message Format:

The following is an example of how a Pass Through Message could work.

RadNet Field	Start Byte Position	End Byte Position	Notes
<b>Start Of RadNet Header</b>			
Header Check Sum	1	1	The check sum is calculated using byte 2 to 55.
RadNet Version	2	2	Value = 0
Message Code	3	3	Value = 2, Pass Through
Instrument Manufacturer Code	4	5	Value = 99, Demo Vendor Code
<b>End Of RadNet Header</b>			
<b>Start Of Manufacturer Example Code Section (This section is defined by the instrument manufacturer)</b>			
Instrument Type Code	6	7	Value = 1, Gamma Area (demo)
Command Type Code	8	8	Value = 0, Set Data
Channel 1, High Voltage Setting	9	10	Value = 705, Volts
Channel 1, Discriminator Lower Window setting	11	14	Value = 4.56
Channel 1, Discriminator Upper Window setting	15	18	Value = 5.6
Channel 2, Channel Type	19	20	Value = 1, Beta
Channel 2, High Voltage Setting	21	22	Value = 1500, Volts
Channel 2, Discriminator Lower Window setting	23	26	Value = 6.78
Channel 2, Discriminator Upper Window setting	27	30	Value = 7.00

## Pass Through Message Format

2/19/2004 7:10 PM

Channel 2, Channel Type	31	32	Value = 2, Gamma
<b>End Of Manufacturer Example Code Section</b>			

## Pass Through Instrument Manufacturer Code

Code	Meaning	Notes
0	Eberline	
1	Aptec Nuclear	
2	Bicron/NE	
3	Canberra	
4	F&J	
5	Ludlum	
6	Nuclear Research	
7	Panasonic	
8	Technical Associates	
9	SAIC	
10	EG&G	
11	Berthold	
12	MGP	
13	ROTEM Ind	
14	Sorrento Electronics	
15	RADOS	
16	Lab Impex System	

# Standard RadNet Header Codes

2/19/2004 7:10 PM

## Authentication Status Codes

See the following pages for more information concerning RadNet Security Implementation:

[Background Information](#)  
[RadNet Security Implementation](#)  
[Authentication](#)  
[Encryption](#)

These codes indicate whether a RadNet message has been authenticated (message fails signature verification). RadNet message(s) are directed to/at a RadNet Authentication Server (RAS) or other device. The RAS will authenticate the message and set byte 52 to indicate the status of the authentication process. The RAS server will then forward the message to clients on the network. It is important that the RAS server is secure and that the data leaving the RAS server is on a secure network (the message will not be tampered with after authenticated). It is also important to note that the RAS server does not strip the authentication keys from the message, and the authentication process could be done at any time, including storing the authentication signature within a database for future verification of the message.

The Authentication software/server will set this byte value to indicated message signature verification status.

Code	Meaning	Notes
0	Message is Ok	
>0	Message fails signature verification.	

# Standard RadNet Header Codes

2/19/2004 7:10 PM

## RadNet Channel Types

Below is a code for type of channel.

Code	Meaning	Notes
0	Alpha	
1	Beta	
2	Gamma	
3	Neutron	
4	Iodine	
5	Noble Gas	
6	Tritium	
7	Stack Flow	
8	Sample Flow	
9	Temperature	
10	Sample Pressure	
11	Leak rate	Primary to secondary, or containment building leak
12	Reactor power	Used for leak measurements
13	Beta + Gamma	The sum of the beta and gamma channels.
14	Latitude	
15	Longitude	
16	Altitude	
17	Humidity	
18	Wind Speed	
19	Wind Direction	
20	Alpha/Beta	
21	Pulse Height Analysis (PHA)	
22	Dust Particle	
23	Humidity	
24	Anemometer	

# Standard RadNet Header Codes

2/19/2004 7:10 PM

## RadNet Monitor Type Codes

Bytes (54-55) are code for the instrument type.

Code	Meaning	Notes
0	Gamma Area Monitor	Uses the Area Monitor body and footer format.  See Area Monitor Header, Body, Footer, and Notes for more information.
1	Gamma Crit Monitor	Uses the Area Monitor body and footer format.  See Area Monitor Header, Body, Footer, and Notes for more information.
2	Neutron Area Monitor	Uses the Area Monitor body and footer format.  See Area Monitor Header, Body, Footer, and Notes for more information.
3	Neutron Crit Monitor	Uses the Area Monitor body and footer format.  See Area Monitor Header, Body, Footer, and Notes for more information.
4	Alpha CAM	Uses the Alpha CAM body, Measurement Footer, Spectrum Footer.  See Alpha CAM Header, Body, Measurement Footer, Spectrum Footer and Notes for more information.
5	Beta CAM	Uses the Beta Cam body and footer format.  See Beta CAM Header, Body, Footer and Notes for more information.
6	PCM Monitor	Uses the PCM body and footer format.  See PCM Header, Body, Footer and Notes for more information.
7	PCM Portal Monitor	Uses the PCM Body and Footer format.  See Portal Header, Body, Footer and Notes for more information.
8	PING	Uses the PING Body and Footer format.  See PING Header, Body, Footer and Notes for more information.
9	Glove Box Monitor/Hand Monitor	Uses The PCM Body and Footer format.  See PCM Header, Body, Footer and Notes for more information.

## Standard RadNet Header Codes

2/19/2004 7:10 PM

10	Hand And Foot Monitor	Uses The PCM Body and Footer format. See Hand and Foot Header, Body, Footer and Notes for more information.
11	Generic Sensor	Uses The Generic Sensor Body and Footer format. See Generic Sensor Header, Body, Footer and Notes for more information.
12	Electronic Reading Dissymmetry	See Header, ERD Body, ERD Footer, for more information.
13	Item Contamination Monitor (ICM)	Uses The ICM Body and Footer format. See Header, Body, Footer and Notes for more information.
14	Radiation Gateway Monitor	Uses The Radiation Gateway Body and Footer format. See Header, Body, Footer and Notes for more information.
15	Gamma Spectrum	Uses The Gamma Spectrum Body, Measurement, Spectrum, Status and Footer format. See Header, Body, Measurement, Spectrum, Status and Notes for more information.
16	Portable Instruments	Protocol Pending, in development by vendor
17	Meteorology Tower	Uses The Meteorology Tower Body and Footer format. See Header, Body, Measurement, Status, and Notes for more information.
18	Video	Uses The Video Body, Status and Footer format. See Header, Body, Footer, Status and Notes for more information.
19	Image	Protocol Pending, in development by vendor
20	Audio	Protocol Pending, in development by vendor
21	Security data tag/seal	Protocol Pending, in development by vendor
22	Tritium Air Monitor	Protocol Pending, in development by vendor
23	Dust Particle Monitor	Protocol Pending, in development by vendor

# Standard RadNet Header Codes

2/19/2004 7:10 PM

## RadNet Message Codes

Byte (03) is the message code. The message code indicates what type of RadNet message has been sent (status, check source, etc.).

Code	Meaning	Notes
0	Normal/Standard RadNet Message	Message is pushed by the instrument and received by the clients.
1	Alarm Ack	Message is pushed by the clients and received by the instruments.  See Alarm Acknowledge Alarm Msg. Notes and Alarm Acknowledge Header Format
2	Pass Through	Message is pushed by the instrument and received by the client or can be pushed by the client and received by the instrument. This method can be used for bi-directional communication by the clients and instruments.  See Pass Through Msg. Header Notes / Pass Through Header Format or Pass Through Codes
3	Check Source	Message is pushed by the clients and received by the instruments.  See Check Source Msg. Notes and Check Source Header Format
4	Diagnostic/Self-Check	Message is pushed by the clients and received by the instruments.  See Diagnostic/Self-Check Msg. Notes and Diagnostic/Self-Check Header Format
5	Request Data	A client/server sends this request to an instrument. In response to this request the instrument will send its current information (Normal RadNet Message).  See Request Data Notes and Request Data Header Format
6	Update/Request Date/Time	A client/server sends this request to an instrument. In response to this request the instrument will send/set the date/time.  See Update/Request Date/Time Notes and Update/Request Date/Time Header Format
7	Acknowledge Receipt	This message is used by the monitoring computer to acknowledge receipt of data from an instrument.  See Acknowledge Receipt Message Header Format and Acknowledge Receipt Message Notes for more information.
255 (FFh)	Encrypted RadNet Message	See the following pages for more information: Background Information RadNet Implementation

## Standard RadNet Header Codes

2/19/2004 7:10 PM

		Encryption Header Message Format Encryption Background Information
--	--	---

# Standard RadNet Header Codes

2/19/2004 7:10 PM

## RadNet Operational and Hardware Status Codes

Note: It is the responsibility of the instrument manufacturer to prioritize the operational and hardware status for the instrument. Any status code can be used either as an operational or hardware status code base upon the instrument usage or needs.

Below is a code used to display the Hardware/Operational Status of the instrument. Hardware status is intended to be a troubleshooting guide when responding to an abnormal condition. Instrument hardware malfunctions generally require repair work. Other conditions may be attributed to either hardware or operational problems. Instrument vendors are responsible for classifying conditions and prioritizing the status change. The intention is that only the most critical status change be pushed; however a series of messages based upon a list of status changes could also be pushed. For example: If the instrument detected failures with low voltage and low background, the vendor could push each status in a separate message (at the abnormal push rate). These statuses could then be interpreted by the client as an HV power supply failure.

OP = Guide For Operational Status Use

HW = Guide For Hardware Status Use

Code	Meaning	OP	HW	Notes
0	Normal	Y	Y	
1	High Alarm	Y	N	
2	HV Fail	N	Y	
3	Count Fail	Y	N	
4	Bkg Fail	Y	N	
5	Bkg Update	Y	N	
6	Comm Fail	N	Y	
7	Gas Empty	Y	N	
8	Buffer Full	Y	Y	
9	Acked High Alarm	Y	N	
10	Flow Fail Low	Y	Y	
11	Flow Fail High	Y	Y	
12	Filter Door Open	Y	N	
13	Instrument Not Ready	Y	Y	
14	Instrument In Calibration Mode	Y	Y	
15	Fast Concentration Alarm	Y	N	
16	Slow Concentration Alarm	Y	N	
17	DAC Hours Alarm	Y	N	

## Standard RadNet Header Codes

2/19/2004 7:10 PM

18	Count Rate Alarm	Y	Y	
19	Release Rate Alarm	Y	N	
20	Fast Concentration Alarm Disabled	Y	N	
21	Slow Concentration Alarm Disabled	Y	N	
22	Count Rate Alarm Disabled	Y	N	
23	Check Source Mode	Y	N	
24	Out Of Service	Y	Y	
25	Alert Alarm	Y	N	
26	Trend Alarm	Y	N	
27	Not Initialized	Y	Y	
28	Standby	Y	Y	
29	Local Control	Y	Y	
30	Flush	Y	N	
31	Alarm Disabled	Y	N	
32	External Fail	Y	Y	
33	AC Off	Y	Y	
34	Crit Relay Fail	Y	Y	
35	Out Of Limits	Y	Y	
36	Crit Alarm	Y	N	
37	NV RAM Fail	N	Y	When the instrument's non-volatile RAM cannot be read/written.
38	Check Source Results	N	Y	Indicates that the message with this status carries check source results. This indicates that this message contains the final check source result at the completion of the check source integration. Prior to this code being sent the status code would be 23 ( <i>Check Source Mode</i> ).
39	Audio Failure	N	Y	Indicates that the instrument has a problem with its audio circuit.
40	Over Range	Y	Y	Indicates that the instrument has exceeded an Over Range value.
41	Diagnostic/Self-check completed, Passed self-check	Y	Y	Indicates that the instrument has performed an Internal Diagnostic/Self-check and found no error conditions.  See Diagnostic/Self-Check Msg. Notes and Diagnostic/Self-Check Header Format

## Standard RadNet Header Codes

2/19/2004 7:10 PM

42	Diagnostic/Self-check completed, Failed self-check	Y	Y	Indicates that the instrument has performed an Internal Diagnostic/Self-check and found error conditions.  See Diagnostic/Self-Check Msg. Notes and Diagnostic/Self-Check Header Format
43	High/High Alarm	Y	N	Third alarm level used in many plants.
44	Internal stabilization failure	Y	N	From automatic energy stabilization.
45	Parameter error	Y	N	Bad setup.
46	Temperature failure	N	Y	Temperature out of operational range.
47	Power supply failure	N	Y	From power supply, or from voltage reading.
48	Analog input failure	N	Y	4-20 mA analog input failure (0 mA for example).
49	Filter failure	N	Y	Automatic filter advance failure (motor, end of roll...).
50	Detector cable failure	N	Y	
51	Electronic or Acquisition board failure	N	Y	Electronic failure.
52	Low Battery	N	Y	Backup battery or internal battery has a low voltage condition.
53	Battery Failed	N	Y	Backup battery or internal battery has failed.
54	Clock Failed	N	Y	Internal clock has failed.
55	User defined	Y	Y	This error code is used whenever an instrument supports user defined error codes. It is used whenever there is a desire to inform a user that one of their error conditions has been reached. Since there is no way of knowing what is contained in the error code logic, this generic response should be used to indicate the error.
56	Internal Communication Failure	N	Y	

## Standard RadNet Header Codes

2/19/2004 7:10 PM

### RadNet Versions

Note: The last approved version in this list is the current version in use by RadNet.

The second byte (02, byte) is the RadNet version number. This number is used to indicate the version of RadNet be pushed by the server. It is the responsibility of the receiving software to handle all received RadNet messages, although the most current version's functionality may not be provided.

Version	Date Approved	Notes
0	Approved	

# Standard RadNet Header Codes

2/19/2004 7:10 PM

## RadNet Units Codes

Below is a code for the RadNet units of the reading.

Code	Meaning	Notes
0	cps	
1	Rem/hr	
2	R/hr	
3	Sv/hr	
4	Bq/cm3	
5	Bq	
6	Degrees Centigrade (C)	Temperature Unit
7	Pascal (Pa)	Pressure Unit
8	cc	Flow Volume Unit
9	cc/sec	Flow Rate Unit
10	cps/cc	Activity Unit
11	counts	Counting Events Unit
12	cm/sec	Velocity Unit
13	bqMeV/cc	Gamma Gas Activity
14	degrees	Wind Direction (180 = south)
15	Gy/hr	Dose Rate Unit
16	RPU%	Reactor Power Unit
17	Kg/sec	Masse flow rate
18	n/cm2	Neutrons / cm2
19	n/cm3	Neutrons / cm3
20	DAC	Derived Air Concentration
21	bq/m3	Becquerel per cubic meter
22	bq/kg	Becquerel per kilogram
23	Latitude	
24	Longitude	
25	Mu_Hemin	Hemisphere North
26	Mu_Hemis	Hemisphere South
27	Mu_Hemie	Hemisphere East
28	Mu_Hemiw	Hemisphere West
29	Mu_Knots	Wind Speed (knots)
30	Mu_KPH	Wind Speed (knots per hour)
31	Mu_MPS	Wind Speed (meters per second)
32	Mu MPH	Wind Speed (meters per hour)

## Standard RadNet Header Codes

2/19/2004 7:10 PM

33	Mu_METERS	Altitude (meters)
34	Mu_Feet	Altitude (feet)
35	Mu_Percent	Humidity
36	Resistance	Electrical Resistance
37	um	Micro-meter

## Standard RadNet Header Codes

2/19/2004 7:10 PM

### RadNet Server Status Codes

Byte (7) is a code that displays the status of the server. Codes are provided for normal as well as a variety of abnormal conditions. See Appendix A for Server Status message codes.

Code	Meaning	Notes
0	Normal Operation	
1	Instrument Communication Error	
2	TCP Communication Error	
3	UDP Communication Error	
4	Hard Disk Full	
5	Password Fail	
6	Starting Up	
7	Shutting Down	
8	Program Error	
9	NetWork Access Granted	
10	NetWork Access Denied	